
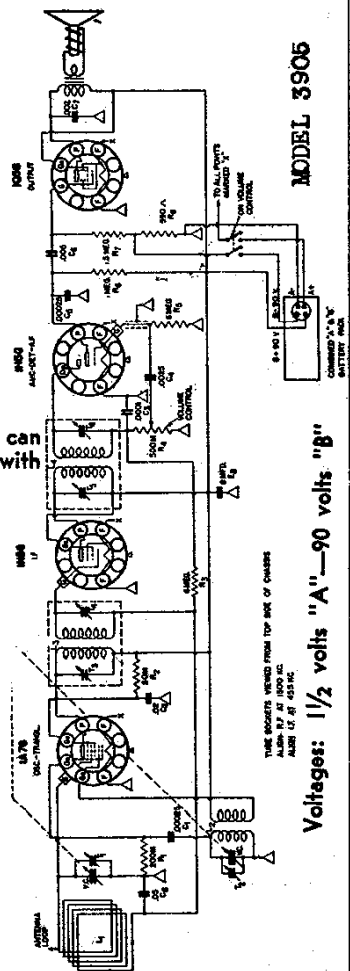
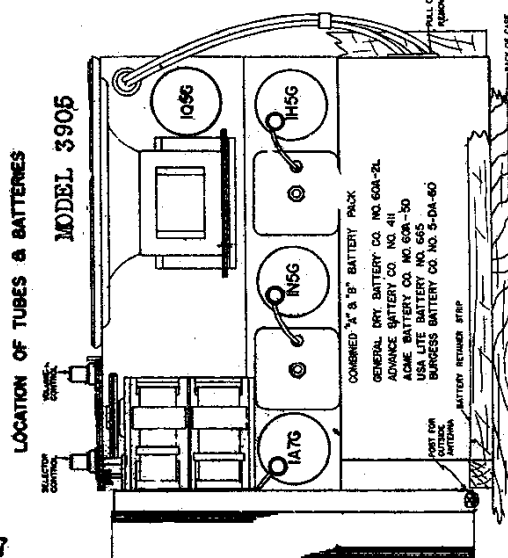
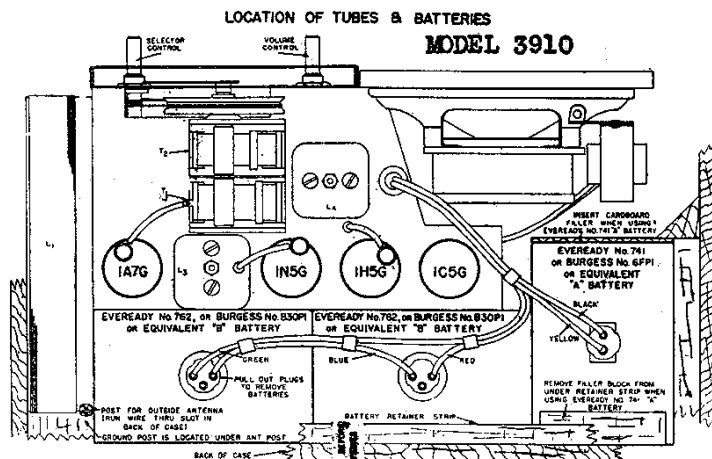


MODEL 257
Tuner Data
MODEL 3905
Schematic, Voltage
Alignment, Socket

AIR KING PRODUCTS CORP.

MODEL 3910
Schematic, Socket

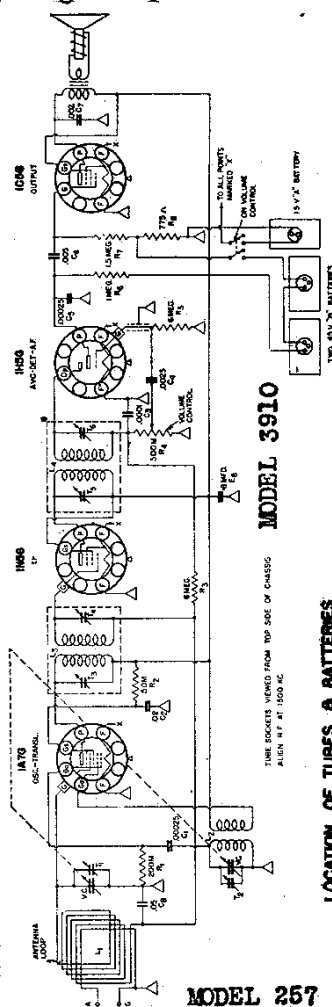

MODEL 257
AUTOMATIC TUNING: There are four push buttons on the front panel which can be set so that by simply pushing the button marked with a station's call letters, any of four different stations may be received.

Allow the receiver to warm up for 20 minutes before making the station adjustments.

Decide on the station you wish to receive.

Tune to this station as accurately as possible with the selector knob.

Next, push in this button as far as possible, being careful not to disturb the station setting on the dial.

Turn this push button knob about one turn to the left, or until it starts to unscrew easily.

Holding the button at the "IN" position, screw the push button knob to the right until it is tight.

Cut out name of station from list supplied and insert in face of button.

Insert celluloid disk.

This completes the adjustments for one station. The three other buttons may be set in a similar manner.

Voltages: 1 1/2 volts "A"—90 volts "B"